THREE WHEEL DOLL JOGGING STROLLER

MODEL NUMBER: 09960

Assembly Instructions.

Adult Assembly Required.

Visit us online at **www.badgerbasket.com**
Toll-Free Customer Service: 1-800-236-1310 (Monday to Thursday 7:30 AM-4:30 PM CST)
Web: http://www.badgerbasket.com/parts • **E-mail:** parts1@badgerbasket.com
Mail: PO Box 227, Edgar, WI 54426-0227 • **Phone:** 715-352-2311 • **Fax:** 715-352-3163

2.0/0608/HF

BEFORE YOU BEGIN ASSEMBLY:

Check all parts and hardware. If anything is missing or not satisfactory, please DO NOT call the store or return the product to them. Contact Badger Basket for assistance. Most problems are resolved without you needing to leave home. When contacting us, please have this instruction manual, your product model number, and your product version code ready.

For fastest service, go to

http://www.badgerbasket.com/parts

Your Product Version Code is: 1.0/0608/HF

PARTS INCLUDED:

Ax1 - STROLLER FRAME
Bx1 - SHORT AXLE
Cx1 - FRONT WHEEL
Dx2 - FRONT SPACER
Ex2 - CAPS
Fx2 - BUMPERS
Gx1 - LONG AXLE
Hx2 - REAR SPACER
Ix2 - REAR WHEELS (with metal clips)

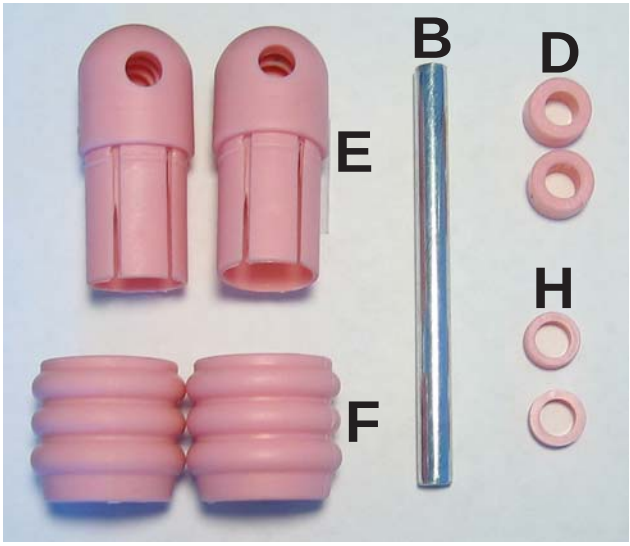

CARE INSTRUCTIONS:

Wipe metal and plastic parts clean with a damp cloth and mild soap as needed.
Spot clean the fabric parts with water and mild detergent as needed.

WARNING - CAUTION

READ ALL INSTRUCTIONS before use of this product. Product and/or Hardware may include small parts. **Choking Hazard!** Keep unassembled parts out of the reach of small children. Use only the parts and hardware provided by Badger Basket. Keep instructions for future use. Do not use the product if it is damaged or broken. Periodically inspect the product and retighten hardware if needed. **This item is a toy for dolls only.** It is never to be used for real children or pets. **For children ages three (3) years and older.**

STEP 1: Unfold the STROLLER FRAME (A) making sure the locks on both sides snap together.
STEP 2: Insert the SHORT AXLE (B) through the FRONT WHEEL (C), and add one FRONT SPACER (D) and one CAP (E) to each side.
STEPS 3 & 4: Slip the BUMPERS (F) onto the two front axle posts (note the proper position below!). Push the CAPS (E) onto the front posts as far as they will go. Push the BUMPERS (F) onto the CAPS (E). The parts “snap” and lock together when properly connected.
STEP 5: Insert the LONG AXLE (G) through the rear posts of the stroller frame. Add one SPACER (H) to each end of the axle; then snap the REAR WHEELS (I) on (squeeze the latch open, slide the wheel onto the axle, and release the latch). Gently tug the wheels to ensure they are connected properly.
STEP 6: Adjust the height of the handle by pressing the buttons on either side.
STEP 7: Lock the safety latches.
STEP 8: Fold the stroller by releasing the safety latch and pulling up on the two frame buckles located on both sides of the stroller seat.

1.

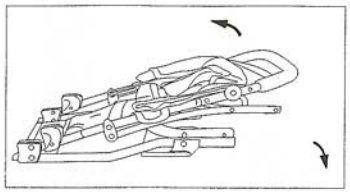

2.

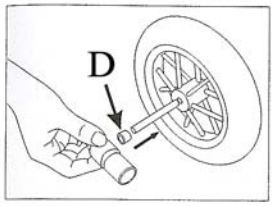

3.

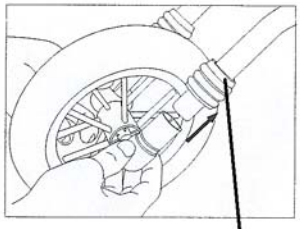

Wider ridge/rim of the BUMPER placed at the top.

4.

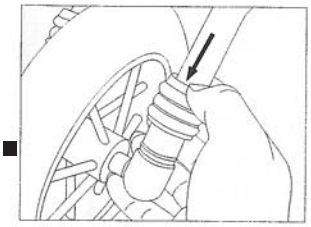

5.

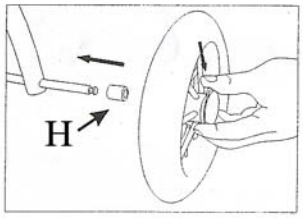

6.

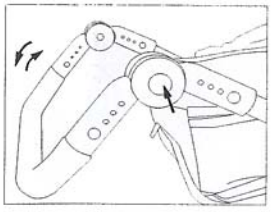

7.

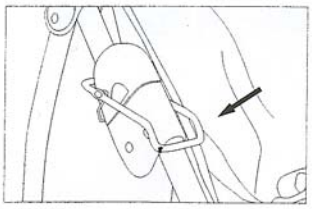

8.